


## AEC Premier Coconut™ Staple Pattern Guide

For 8 ft wide AEC Premier Coconut Erosion Control Blankets

Application	Slope		Channel
	≤ 3H:1V	≤ 1H:1V	≤ 2.25 lb/ft <sup>2</sup> (108 Pa) Shear Stress ≤ 9.0 ft/sec (2.7 m/sec) Velocity
Staple Pattern	A	B	B

○ = Staple Placement

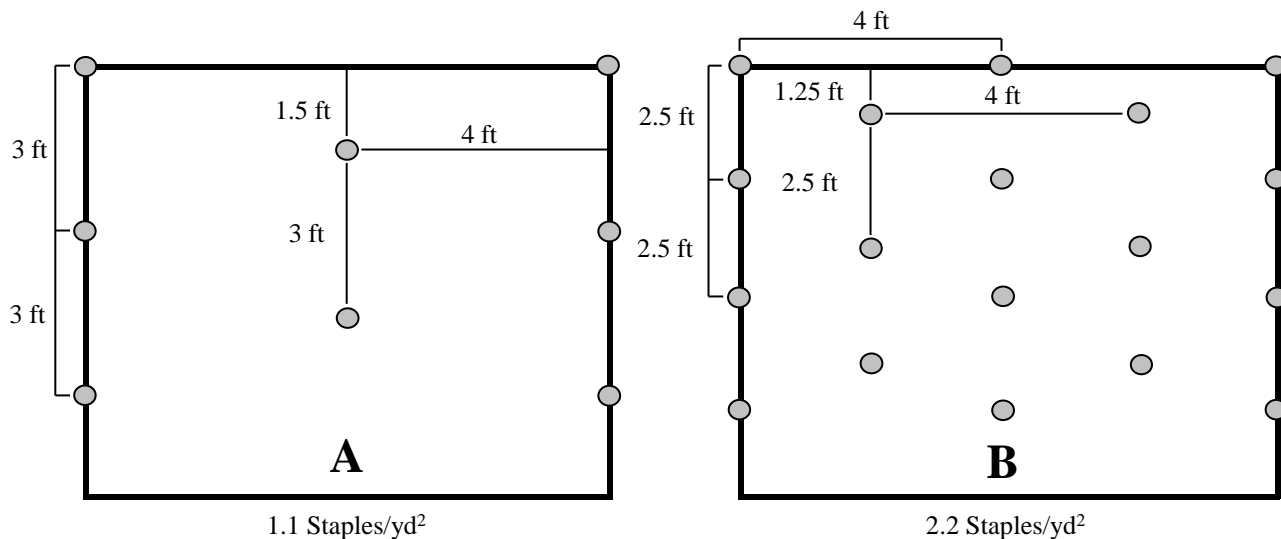

### Notes:

1. Recommended staples are a minimum 4 in biodegradable E-Staple®, as provided by American Excelsior Company, or 6 in wire for cohesive soils and 6 in biodegradable E-Staple®, as provided by American Excelsior Company, or 8 in wire for non-cohesive soils.
2. For best results insert staples so heads are parallel to the flow of water.
3. Adjust staple pattern so staples are placed in critical channel points (e.g. slope interface, channel bottom) as illustrated below:

Critical channel points are circled.

